



## *User guide for Yale keyfree lock*

### ***Important:***

- ! Don't forget that your lock is intended to secure you and your valuables against undesirables!*
- ! Incorrect use may result in loss of valuables!*
- ! Do not use water or solvents for cleaning as it may cause damage to the electronics*
- ! Wring out a cloth for cleaning!*



### ***In case of emergency contact:***

*During normal working hours: Your caretaker, mobile: 21 247 547.*


*Outside normal working hours:*

*Byens Låse, 24-hour telephone 86 106 500. (for payment)*


**Open the door from outside:**

<p>Press ★ PIN code ★</p> 	<p>Open the door with the door handle</p>	 <p><b>The door is open</b> This symbol lights up when the door is opened from outside.</p>
---	---	--




**Lock the door from outside:**

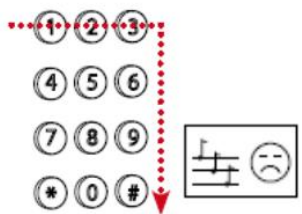
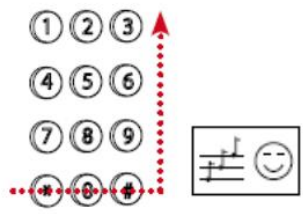


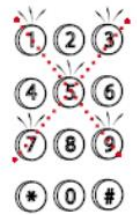
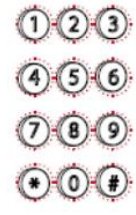
<p>Close the door</p> 	<p>Press ★</p> 	<p>The door is now fully locked</p> 
---	--	---

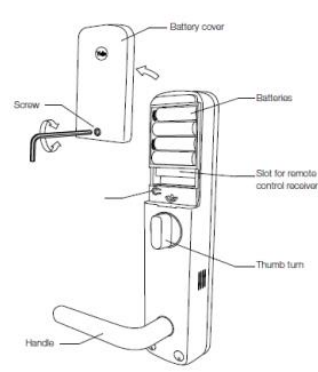

**Open the door from inside:**

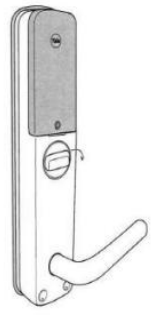
<p>Turn the thumb turn</p> 	<p>Open the door with the door handle</p> 
--	---

**Close the door from inside:**

<p>Close the door</p> 	<p>Turn the thumb turn</p> 	<p>The door is locked</p> 
---	--	---

Indications, alarm and signals:		
<p>When locking the light rolls from top row and downwards combined with a "sad" tone.</p> 	<p>When unlocking the light rolls from bottom row and upwards combined with a "happy" tone.</p> 	<p>Errors are indicated by irregular flashing light during a short period combined with an "error sound".</p> 
<p>Intruder alarm is indicated with 80dB alarm sound combined with slow flashing light.</p> 	<p>When entering the wrong code the numbers flash in cross pattern combined with an "error" sound.</p> 	<p>When entering the wrong code 5 times all numbers flashes slowly without sound for 3 minutes until new attempt is allowed.</p> 

Change of batteries:		
<p>Remove the battery cover Exchange the batteries with 4 new 1,5V alkaline batteries.</p>		 <p><b>Battery warning.</b> The symbol lights up on the outside of the lock when battery level is low and battery change should be made.</p>

Emergency opening. Flat batteries:	
	<p><b>Emergency opening.</b> Turn the thumb turn to and keep it in horizontal position. At the same time press the door handle down and open the door.</p>